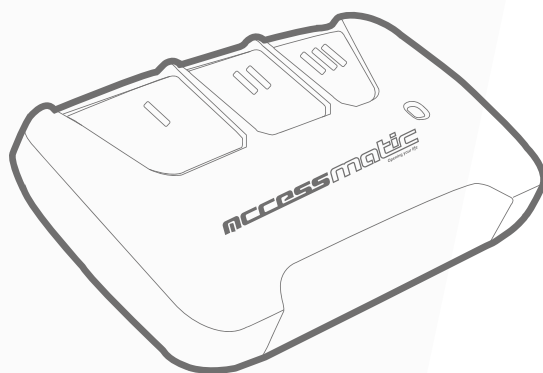 


MANUAL DE USUARIO

*Control remoto inalámbrico
multifrecuencia de 300 - 868 Mhz*



accesslink **AL39**

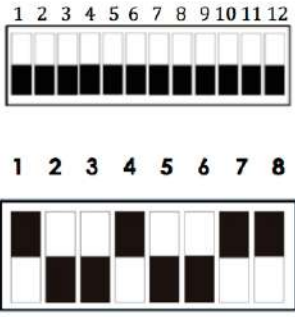 
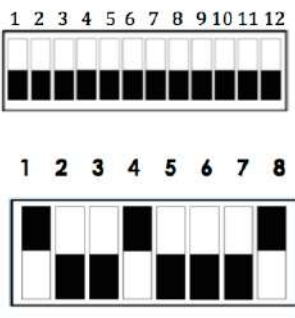 
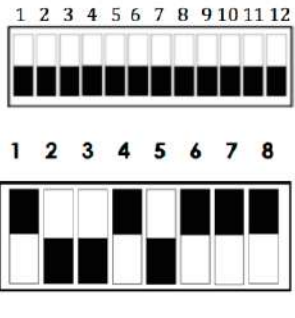 
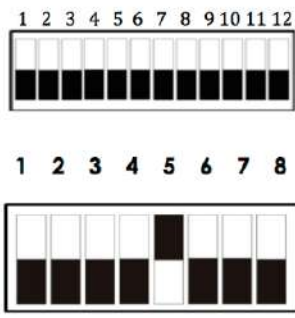 
ADVERTENCIA

Por favor lea el manual detenidamente antes de la instalación el uso del producto. La instalación de su nueva puerta debe ser realizada por una persona técnicamente calificada o licenciada. Tratar de instalar o reparar el motor sin tener la calificación técnica puede resultar en severas lesiones personales, muerte y/o daños a la propiedad.

Clonación de señal desde otro control

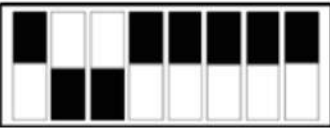 
Tabla1.

Nº	Interruptores Dip	Compatible con la marca	Original	Abridor de puerta con botón Liftmaster	Onmi Pulse
1		Liftmaster 315 MHz			3
2		Liftmaster 315 MHz			3
3		Liftmaster Security+ 315 MHz	 	 	3
4		Liftmaster BILLION CODE 81LM LM 82 61LM 390 MHz			5

5		Liftmaster 390 MHz			5
6		Liftmaster 971LM 972LM 973LM 974LM Security + 390 MHz			5
7		Linear MCT-3 318 MHz			
8		FAAC XT 315 RC 315 MHz		LED Rojo	

9	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	SOMMER 315 MHz FM			7
10	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	Liftmaster 315 MHz			4
11	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	Genie 315 MHz			11
12	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	Genie 1024 315 MHz Selection A			10
13	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	Genie GM3T G1TR-3 G3T-BX 390 MHz			12

14	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	GUARDIAN 2211-L 303 MHz			14
15	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	Overhead 109130-390 390 MHz			9
↓ Las siguientes marcas necesitan usar los Dips en la segunda línea ubicada debajo del clip ↓					
16	1 2 3 4 5 6 7 8 1 2 3 4 5 6 7 8	Liftmaster Chamberlain K722 390 MHz		(9 dips)	

					
17	1 2 3 4 5 6 7 8 	Genie 390 MHz Selection B		Mode A Code select by position 1 to 9 on DIP12	13
18	1 2 3 4 5 6 7 8 	Multicode Digi-code 300 MHz		Code select by position 1 to 10 on DIP12	15
19	1 2 3 4 5 6 7 8 	Multicode Digi-code 310 MHz		Code select by position 1 to 10 on DIP12	16
20	1 2 3 4 5 6 7 8 	LINEAR DTD 310 MHz		Code select by position 1 to 8 on DIP12	8

Modo de parpadeo secuencial

1. Para trabajar con esta función seleccione los DIPs en la siguiente posición.
2. Oprima la tecla oculta durante 1 segundo para activar este modo. Las luces LED se encenderán de manera permanente.
3. Seleccione el botón normal deseado, dependiendo del número de veces que lo oprima, se seleccionara una marca diferente. Hay 9 marcas disponibles (Vea la tabla de abajo). El control alumbrará para indicar la marca seleccionada.
4. Oprima la tecla oculta para salir.

Por ejemplo

Oprima la tecla oculta 1s + Oprima 2 veces el botón ordinario 2 x flash + Tecla oculta = LIFTMASTER 390MHz

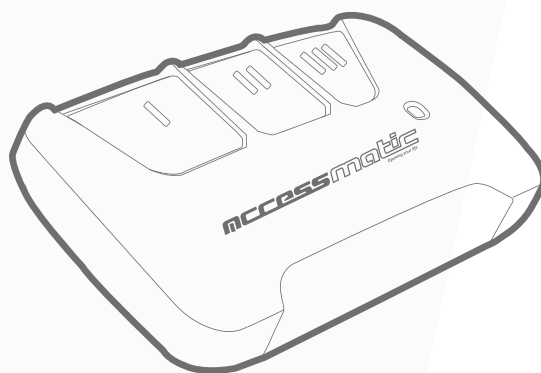 
Si oprime el botón 1 vez, alumbrará 1 vez. Si oprime inmediatamente después, alumbrará dos veces, y así sucesivamente. No es necesario esperar al parpadeo entre cada vez que oprima el botón (funciona como indicador). Si está en la secuencia requerida, oprima la tecla oculta para salir y la marca habrá sido seleccionada. Recuerdo que los botones funcionan de manera independiente, puede programar 3 marcas diferentes con los 3 botones.

Tabla.

1	Posición	No parpadeos	Marca
	1 2 3 4 5 6 7 8	1 vez	LIFTMASTER 315 MHZ
		2 veces	LIFTMASTER 390 MHZ
		3 veces	LIFTMASTER 315 MHZ
		4 veces	LIFTMASTER 390 MHZ
		5 veces	SOMMER 315 MHZ
		6 veces	SOMMER 390 MHZ
		7 veces	GUARDIAN 303 MHZ
		8 veces	GENIE 315 MHZ
		9 times	GENIE 390 MHZ

USER MANUAL

*300-868 Mhz wireless
multi-frequency remote control*



accesslink **AL39**

WARNING

Please read the manual carefully before installation using the product. The installation of your new door must be carried out by a technically qualified or licensed person. Attempting to install or repair the motor without technical qualification can result in severe personal injury, death, and / or property damage.

MANUAL AL3900U

TECHNICAL FEATURES

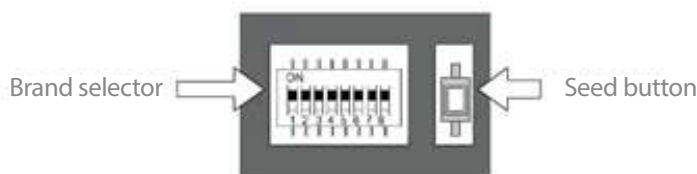 
Model AL3900U
1 Battery 2032 (3V)
Frequencies 300 - 900 Mhz ü
3 Channels
Special Chip

IN AL3900U THE USER CAN PROGRAMME DIFFERENT BRANDS AND FREQUENCIES IN EACH BUTTON JUST FOR SEQUENTIAL FLASH MODE

ENTERING DIRECTLY THE RECEIVER MODE

PROGRAMMING INSTRUCTIONS

1. Locate the selector switch in the back of the remote. Retire the cover to expose the selector switch and the hidden button, see image below.
 2. Set your selector switch of 8 DIPs switch with the desired brand. See Table 1 and image below.
 3. Head for your receiver, in case it has DIPs switch, this defines the code of this specific receiver, please select this same combination from the receiver in the transmitter AL3900U.
- C, both must match, otherwise the communication between them will not work. In case your receiver doesn't have this DIP selector, this section must be ignored, it is not necessary.
4. The remote is ready to be used, press any button (from 1 to 3) please refer to your receiver's user manual.



ATTENTION! If you want to program AL3900U directly in our receiver Omni - Pulse, you need to set following DIPS switches positions in the remote and receiver:

Figure 1 displays two bar charts comparing the distribution of pulse widths for two different pulse types: AL3900U and Omni-pulse.

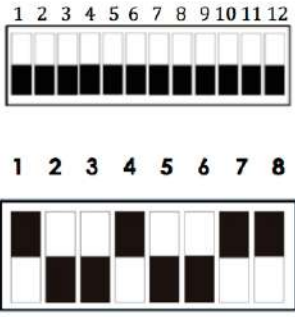 
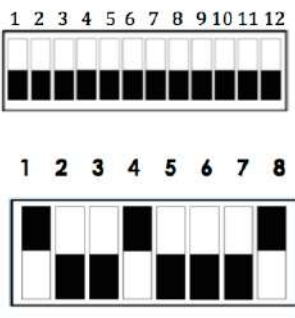 
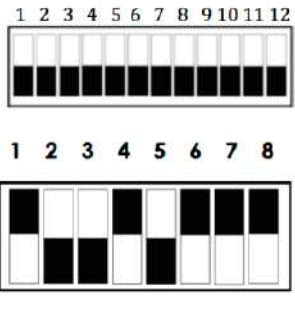 
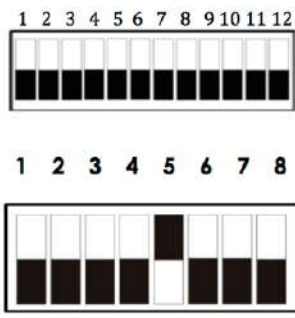 
The AL3900U chart shows the distribution of pulse widths from 1 to 12. The distribution is skewed towards higher pulse widths, with the highest frequency occurring at 12.

The Omni-pulse chart shows the distribution of pulse widths from 1 to 8. The distribution is more centered, with the highest frequency occurring at 4.

Signal cloning from another control

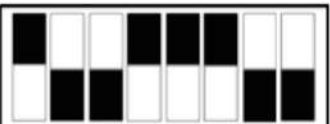 
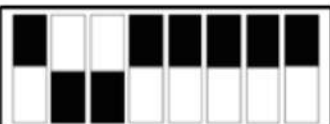 
Table 1.

N°	DIP SWITCHES	Brand Compatible	Original	Button gate door opener Liftmaster	Onmi Pulse
1		Liftmaster 315 MHz			3
2		Liftmaster 315 MHz			3
3		Liftmaster Security+ 315 MHz	 	 	3
4		Liftmaster BILLION CODE 81LM LM 82 61LM 390 MHz			5

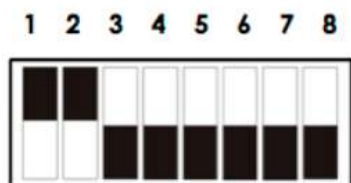 
5		Liftmaster 390 MHz			5
6		Liftmaster 971LM 972LM 973LM 974LM Security + 390 MHz	 		5
7		Linear MCT-3 318 MHz			
8		FAAC XT 315 RC 315 MHz		LED Rojo	

9	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	SOMMER 315 MHz FM			7
10	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	Liftmaster 315 MHz			4
11	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	Genie 315 MHz			11
12	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	Genie 1024 315 MHz Selection A			10
13	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	Genie GM3T G1TR-3 G3T-BX 390 MHz			12

14	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	GUARDIAN 2211-L 303 MHz			14
15	1 2 3 4 5 6 7 8 9 10 11 12 1 2 3 4 5 6 7 8	Overhead 109130-390 390 MHz			9
↓ Las siguientes marcas necesitan usar los Dips en la segunda línea ubicada debajo del clip ↓					
16	1 2 3 4 5 6 7 8 1 2 3 4 5 6 7 8	Liftmaster Chamberlain K722 390 MHz		(9 dips)	

					
17	1 2 3 4 5 6 7 8 	Genie 390 MHz Selection B		Mode A Code select by position 1 to 9 on DIP12	13
18	1 2 3 4 5 6 7 8 	Multicode Digi-code 300 MHz		Code select by position 1 to 10 on DIP12	15
19	1 2 3 4 5 6 7 8 	Multicode Digi-code 310 MHz		Code select by position 1 to 10 on DIP12	16
20	1 2 3 4 5 6 7 8 	LINEAR DTD 310 MHz		Code select by position 1 to 8 on DIP12	8

SEQUENTIAL FLASH MODE



1. To work with this function select dip position on the table below.
2. Press the hidden button for 1 second to activate this mode, the LED lights permanent on.
3. Select the desired normal button, depending on how many times you press it, it will be selected a different brand. There are 9 different brands available, refer to table below. The remote will flash to indicate the brand selected.
4. Press hidden button to exit.

For instance:

HIDDEN BUTTON 1s + PRESS 2 TIMES ORDINARY BUTTON 2 x FLASH+ HIDDEN BUTTON
LIFTMASTER 390 MHZ

If the user press the button 1 time, the remote will flash 1 time, if immediately after the user press again, it will flash 2 times and so on, it is not necessary to wait this flash between one touch and the following, it's just an indicator, it has no influence.

If the flash time is the required one, press hidden button to exit and the brand will be the one you required. Remember the buttons work independently, you can programme 3 different brands of three buttons.

DIP POSITION		FLASH NUMBER	BRAND
1		1 time	LIFTMASTER 315 MHZ
		2 times	LIFTMASTER 390 MHZ
		3 times	LIFTMASTER 315 MHZ
		4 times	LIFTMASTER 390 MHZ
		5 times	SOMMER 315 MHZ
		6 times	SOMMER 390 MHZ
		7 times	GUARDIAN 303 MHZ
		8 times	GENIE 315 MHZ
		9 times	GENIE 390 MHZ

The background is a solid green color with several light green, curved, overlapping lines that create a sense of motion and depth. The logo is centered horizontally.

accessmatic

Opening your life